

PV-HCB40x – 规格说明书


PV CONNECTOR INSTRUCTION



Zhejiang Chint Xinhui Photovoltaic Co., Ltd.

Add: No. 2 Xiabao Road, Yueqing Bay Port District, Yueqing City, Wenzhou City, Zhejiang Province, 325600 P. R. China.

外形尺寸Overall Dimensions

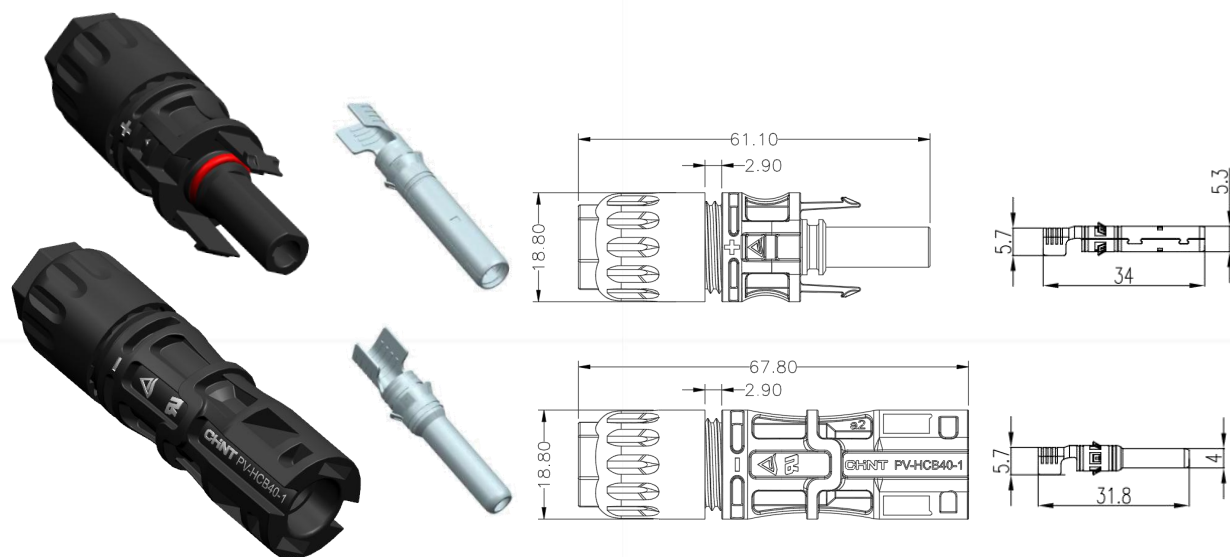


技术参数Technical Parameters

产品名称/Name:	PV-HCB40x
额定电压/Rated voltage:	1500V
额定电流/Rated current:	TUV:46A for 4 mm ² TUV:54A for 6 mm ² TUV:70A for 10 mm ² UL:30A for 4 mm ²
线径规格/Cable specifications:	TUV:4/6/10mm ² UL:4mm ²
接触电阻/Contact Resistions:	≤0.35mΩ
防护等级/Protection Degree:	IP65/IP68(1m, 1h)
保护等级/Protection class:	Class II
温度范围/Temperature range:	-40°C ~ +85°C
电气连接/Electricall connection:	铆接Crimping



外形尺寸Overall Dimensions

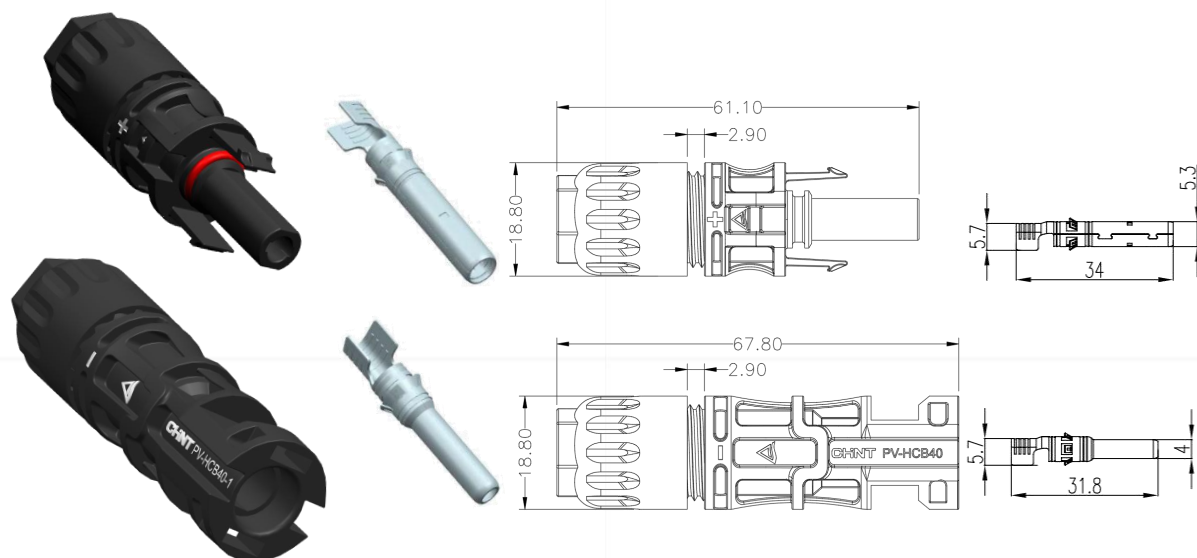


技术参数Technical Parameters

产品名称/Name:	PV-HCB40x
额定电压/Rated voltage:	1500V
额定电流/Rated current:	TUV:46A for 4 mm ² TUV:54A for 6 mm ² TUV:70A for 10 mm ²
线径规格/Cable specifications:	TUV:4/6/10mm ²
接触电阻/Contact Resistions:	≤0.35mΩ
防护等级/Protection Degree:	IP65/IP68(1m, 1h)
保护等级/Protection class:	Class II
温度范围/Temperature range:	-40°C ~ +85°C
电气连接/Electrical connection:	铆接Crimping

操作方法 Operation Method

1.在线缆末端用剥线钳剥皮，剥皮长度6.0-7.5mm(如图)。注意：剥皮时不能有剪断铜丝现象,剥皮长度符合要求。

Strip the end of the cable with wire stripper, the stripping length is 6.0-7.5mm (as shown in the figure).Note: the copper wire can not be cut when peeling, and the peeling length must meet the requirements.

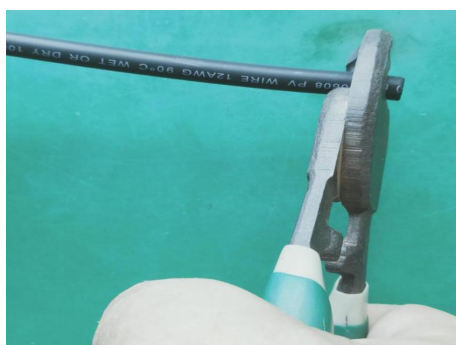

2.打开压线钳手柄，把连接器端子放入到压线钳对应规格槽并塞入到位（端子铆线杯口需向上，如图）。


Open the handle of the crimper, put the connector terminal into the corresponding specification slot of the crimper and plug it in place (the rivet cup of the terminal shall be upward, as shown in the figure)



操作方法 Operation Method

3.把剥好皮的线缆芯线端放入端子杯口内（线皮贴近端子杯口平面），按下压线钳手柄压紧端子。

Put the stripped cable core end into the terminal cup (the wire cup is closed to the plane of the terminal cup), and press the handle of the crimper to compress the terminal.

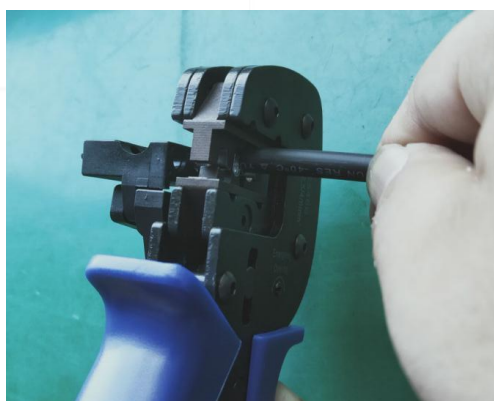

4.松开压线钳手柄取出线缆,目视检查端子是否有未压牢固、压偏、漏铜丝等现象。

Loosen the handle of the crimper and take out the cable, and visually check whether the terminal is not firmly pressed, biased, copper wire leakage, etc.



操作方法 Operation Method

5.把压好端子的线缆对准连接器后端孔内插入到位，听到“咔哒”声则插针插入到位，然后轻轻反向拉动线缆，插针不脱出为装配到位。

Insert the cable with the terminal pressed in place into the rear hole of the connector, When you hear a "click" sound, insert the pin into place, then gently pull the cable in the opposite direction. If the pin does not come out, it means the assembly is in place.



6.把专用扳手中间卡口卡入连接器前端，另一扳手卡入螺母花纹端顺时针转动扳手锁紧螺母，螺母留2.9mm缝隙。


Insert the middle bayonet of the dedicated wrench into the front end of the connector, and insert the other wrench into the nut pattern end. Rotate the wrench clockwise to lock the nut, leaving a 1.1mm gap in the nut.



操作方法 Operation Method


7. 正极连接器与负极连接器对插（如下图所示）。

The positive connector and the negative connector are inserted together (as shown below).

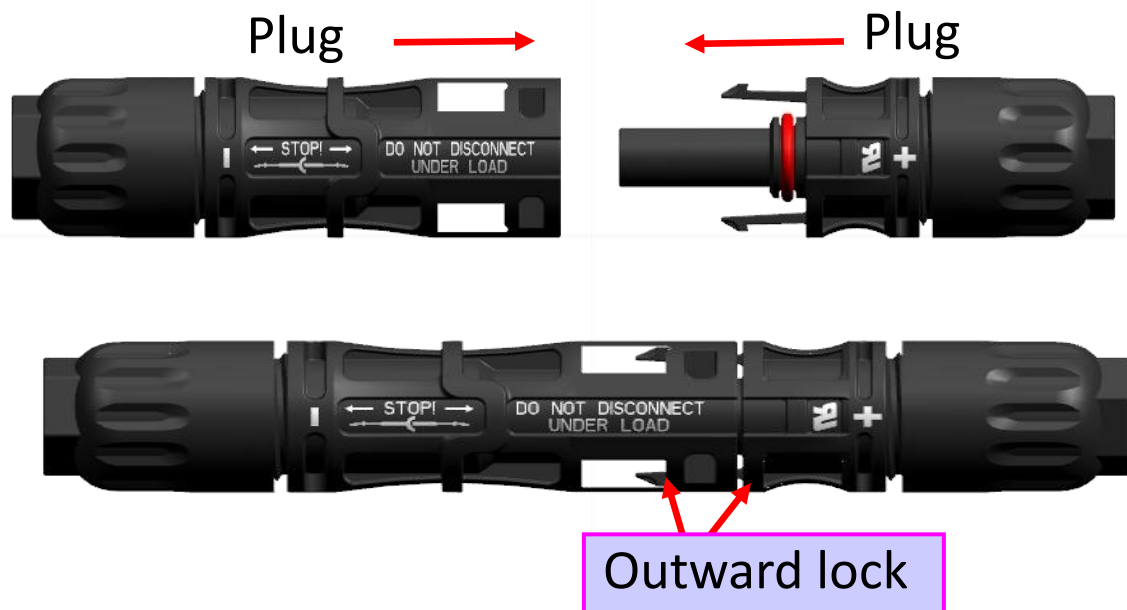

8. 把专用工具/PV-HCB40x专用工具插入连接器扣位处往后推，同时正负连接器往相反方向拉就可打开连接器。

Insert the PV-HCB40x special tool (T02) into the connector button and push back, while the positive and negative connectors can be pulled in the opposite direction to open the connector.

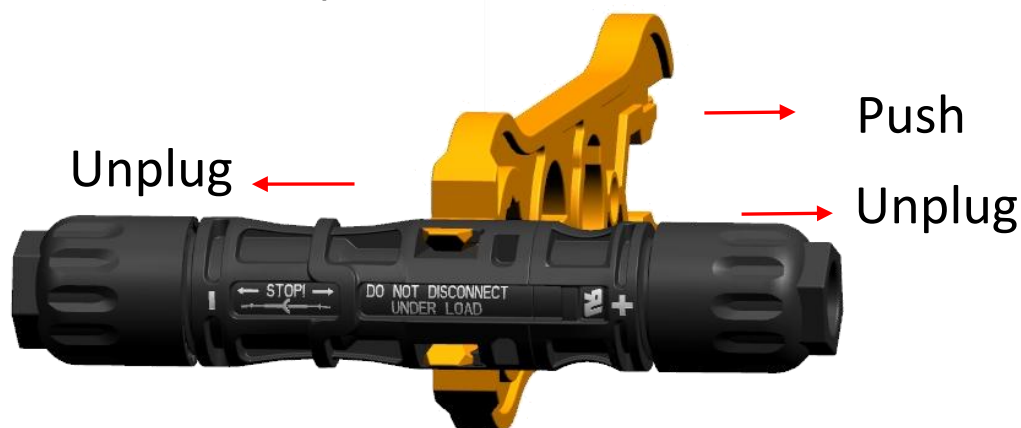


注意事项

1. 禁止强氧化剂、强酸、强碱物质和极性有机溶剂、卤代烃类接触连接器，如甲酸、甲醇、苯酚、二氯甲烷、漂白剂等。
2. 连接器不可以和硅胶、灌封胶直接接触，连接器线缆禁止挂、拉重物。
3. 产品装卸及运输过程中注意轻拿轻放，不要受外力重压，以免造成损坏。
4. 工作人员应配有适当的静电防护措施。
5. 如果不是维护需要，请不要频繁进行连接系统的开合或插拔。
6. 请不要在负载下断开连接（见下图连接器警示语）。
7. 户外维护应由专业人员进行。
8. 电气安装说明应包括根据美国国家电气规范ANSI/NFPA 70使用的接线方法的详细描述。
9. 接线盒的出线处不能折弯或受挤压，最小的折弯半径R必须保持 ≥ 5 倍电线直径。
10. 现场安装线缆及组件时,必须避免导体或连接器处于绷紧状态（见下图示意图）。



折弯半径 $R \geq 5$ 倍线缆直径
Radius (R) $> 5 \times \text{cable } \varnothing$

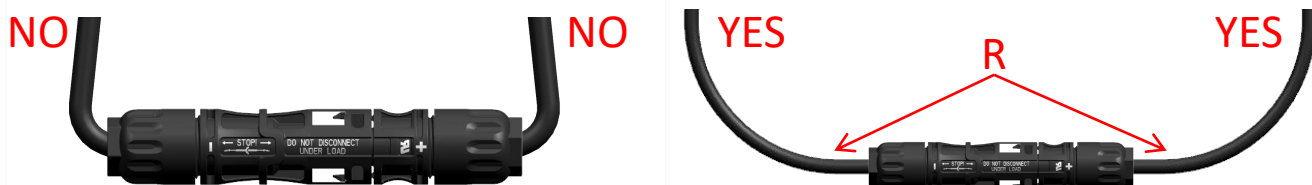

Matters Needing Attention

1. Prohibit contact connectors with strong oxidants, strong acids, strong alkalis, polar organic solvents, halogenated hydrocarbons, such as formic acid, methanol, phenol, dichloromethane, bleach, etc.
2. Connectors should not come into direct contact with silicone or potting adhesive. Connector cables are prohibited from hanging or pulling heavy objects.
3. During the loading and unloading and transportation of the product, please handle it with care and do not be subject to external pressure to avoid damage.
4. The staff should be equipped with appropriate electrostatic protection measures.
5. If it is not necessary for maintenance, please do not frequently open and close or plug and unplug the connection system.
6. Please do not disconnect the connection under load (See previous page connector warning).
7. Outdoor maintenance should be carried out by professional personnel.
8. Electrical installation instructions should include a detailed description of the wiring method used in accordance with US National Electrical Code ANSI/NFPA 70.
9. The outlet of the junction box cannot be bent or extruded. The minimum bending radius R must be maintained at ≥ 5 times the diameter of the wire. When installing cables and components on site, it is necessary to avoid the conductor or connector being in a tight state (See previous page diagram).
10. It is not allowed to interplug the connector with other connectors or connectors that do not match the specifications in the market.